

Microphone configuration for AMILO with Realtek HD Sound chip and Vista


Issue	10.10.2007
Category	Configuration paper
Content	Microphone
	1.0
Use	External
Pages	2

We recommend the following configuration for optimum microphone quality.

Right mouse click on the Windows Loudspeaker Icon in the Taskbar, and goto "Recording Devices".





Double click on "Speakers" in the register tab "Playback".

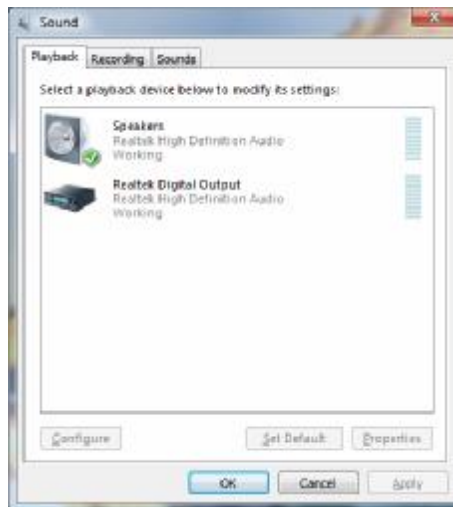

Goto register tab „Levels“ and enter the following settings:

1. Set „Microphone“ level to 95%.
2. Activate and deactivate the Microphone (important).
3. "PC-Beep" and "Rear Green In" must be disabled.

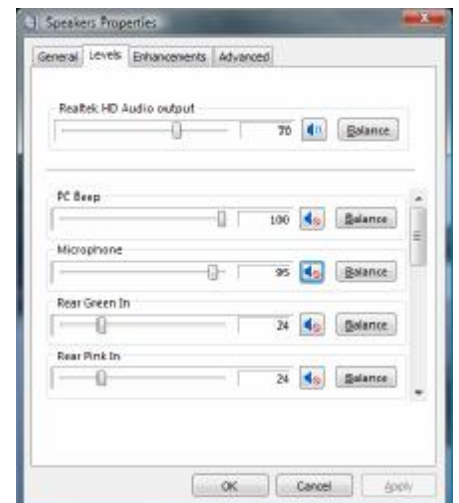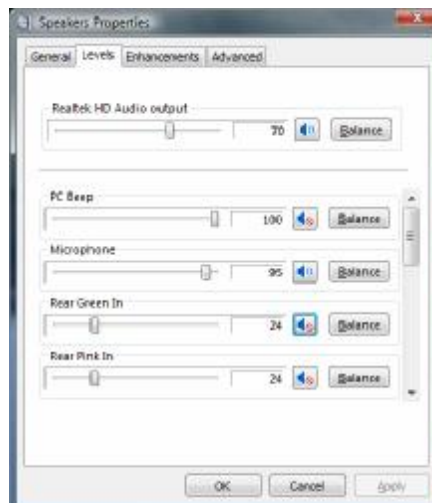


Close all Windows with "OK".

Right mouse click in the Taskbar on *Realtek HD Audio-Manager*.



Open the „*Sound-Manager*“; goto register tab “*Microphone*” and enter the following settings:

1. Set “*Recording Volume*” to 95%.
2. Deactivate “*Playback Volume*”.
3. Activate “*Noise Suppression*.”
4. Activate “*Acoustic Echo Cancellation*”.

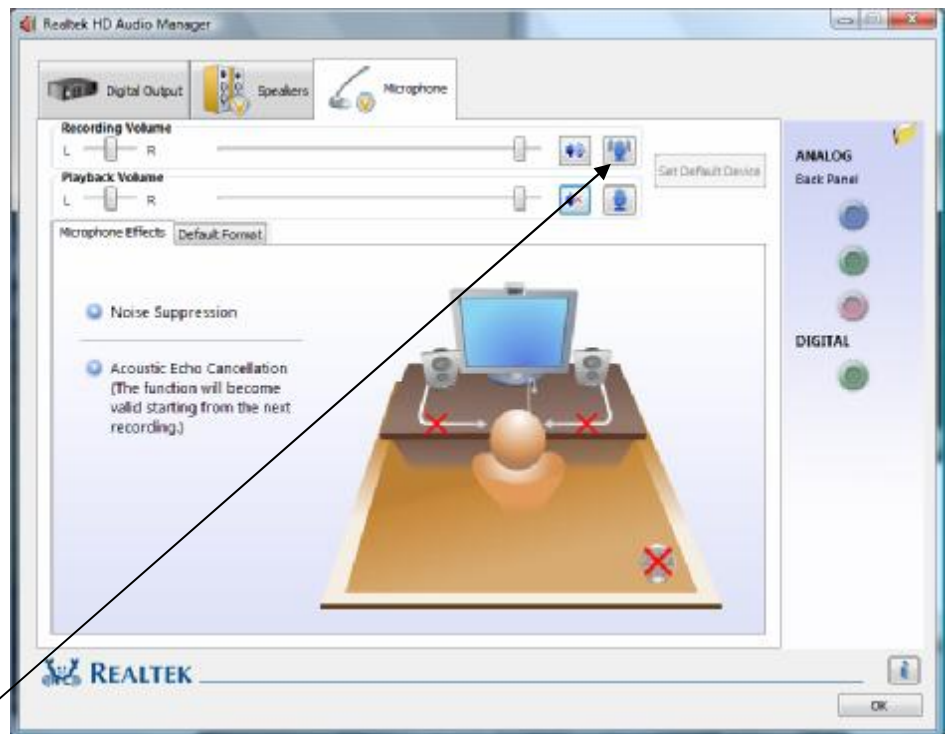

Click on Microphone amplification and change the Microphone level to +20.0 dB or +30.0 dB (if possible).

